


PROD REV: A-1 DWG VER: V-1

NURA BEDFRAME TWIN

(NURA-000-003)



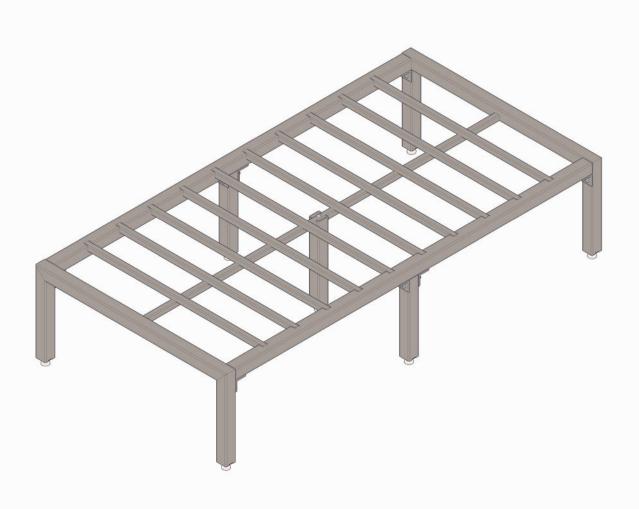

Contents

| WARNING | 3 |
|-----------------------|----|
| BILL OF MATERIALS | 4 |
| GLOSSARY | 5 |
| AWS SYMBOLS | 6 |
| ASSEMBLY INSTRUCTIONS | 7 |
| PART DRAWINGS | 27 |



WARNING



SAFETY WARNING: WELDING INVOLVED

Before you begin the assembly process, it's crucial to understand the risks and necessary precautions associated with welding. Please read and adhere to the following safety guidelines:

- **Professional Supervision:** If you're inexperienced in welding, consider seeking guidance or supervision from a trained professional. A small error can have significant consequences on the durability and safety of your furniture.
- **Protective Gear:** Welding can produce intense UV light, sparks, and spatter. Always use a welding helmet with the correct shade of lens, wear flame-resistant clothing, leather gloves, and safety boots. Safety glasses should be worn underneath the helmet for added eye protection.
- Work in a Safe Environment: Welding can produce harmful fumes and gases. Always work in a well-ventilated space, preferably outdoors. Remove any flammable materials from the vicinity, and always have a fire extinguisher on hand.
- **Pre-welding Inspection:** Thoroughly inspect the metal parts for any signs of damage, rust, or contamination. Clean the areas to be welded to ensure there are no oils, paints, or other materials that might interfere with the weld.
- **Equipment Check:** Before you start, ensure your welding machine is in proper working condition. Check cables, connectors, and welding gun for any damage or wear.
- Avoid Water: Never weld in wet conditions or touch the welding equipment with wet hands or gloves. Water is a conductor of electricity and can increase the risk of shocks.
- **Grounding:** Ensure that the piece you're welding is correctly grounded. A proper ground connection is essential for safety and for producing quality welds.
- **Post-welding Protocol:** Once you finish welding, let the welded parts cool down gradually. Rapid cooling can lead to metal warpage or structural weaknesses.
- **Stay Informed:** Familiarize yourself with the Material Safety Data Sheet (MSDS) for the metals you're working with and the filler materials you're using.
- **First Aid:** Keep a first aid kit nearby. In case of minor burns, immediately hold the affected area under cold running water for at least 10 minutes.
- Limit Distractions: Ensure that your workspace is free from unnecessary distractions. Focus is critical when welding to maintain consistent quality and safety.
- Store Equipment Safely: After completion, store your welding equipment in a dry, safe place away from children's reach.

Remember, your safety and the quality of your work go hand in hand. Always prioritize safety precautions and never rush the welding process. If you're ever uncertain about a step or safety measure, seek guidance before proceeding.

Your safety is our top priority! No task justifies risking injury.



BILL OF MATERIALS

See page 27 for detailed drawings of each part.

| | | | | | 1 |
|------|--------------|---|-----|---------------------|------|
| ITEM | PART NUMBER | DESCRIPTION | REV | MATERIAL | QTY. |
| 1 | 1000-000-003 | Steel Hex Head Screw - 3/8"-16 x 1.5" - Partially Threaded | A-1 | Steel | 1 |
| 2 | 1000-000-011 | Steel Hex Head Screw - 3/8"-16 x 3" - Partially Threaded | A-1 | Steel | 4 |
| 3 | 1000-000-012 | Steel Hex Head Screw - 3/8"-16 x 0.75" - Partially Threaded | A-1 | Steel | 24 |
| 4 | 1001-000-001 | Steel Hex Nut - 3/8"-16 | A-1 | Steel | 4 |
| 5 | 1001-010-002 | Projection Weld Nut375-16 | A-1 | Steel | 8 |
| 6 | 1001-015-000 | Steel Rivet Nut - 1/4"-20 | A-1 | Steel | 24 |
| 7 | 1011-000-001 | Swivel Leveler - 2.875"375-16_Non-skid | A-1 | Steel | 7 |
| 8 | NURA-051-000 | Nura Bed Frame Right Leg | A-1 | SQ_A500_2X2_0.109T | 2 |
| 9 | NURA-051-001 | Nura Bed Frame Left Leg | A-1 | SQ_A500_2X2_0.109T | 2 |
| 10 | NURA-052-003 | Nura King Bed Frame Stretcher | A-1 | SQ_A500_2X2_0.109T | 2 |
| 11 | NURA-053-003 | Nura King Bed Frame Reacher | A-1 | SQ_A500_2X2_0.109T | 2 |
| 12 | NURA-054-000 | Nura Bed Frame Middle Leg | A-1 | SQ_A500_2X2_0.109T | 2 |
| 13 | NURA-055-000 | Nura Bed Frame Center Leg | A-1 | SQ_A500_2X2_0.109T | 1 |
| 14 | NURA-056-000 | Nura Bed Frame Center Leg Plate | A-1 | SM_A36_0.1045T | 1 |
| 15 | NURA-057-000 | Nura Fastener Angle | A-1 | AG_A500_2X2_0.1875T | 8 |
| 16 | NURA-058-000 | Nura Leg Bottom Plate | A-1 | SM_A36_0.125T | 7 |
| 17 | NURA-059-003 | Nura King Bed Frame Slab | A-1 | SQ_A500_1X1_0.083T | 10 |
| 18 | NURA-060-003 | Nura Bed Frame Middle Reacher | A-1 | SQ_A500_1X1_0.083T | 1 |
| L | | | 1 | | |

**** ITEMS NOT PROVIDED**

GLOSSARY

METAL TUBE

SQ_A500_2X2_0.065T

TYPE

MATERIAL

SIZE

MATERIAL THICKNESS

SHEET METAL

SM_A36_0.065T

TYPE

MATERIAL

MATERIAL THICKNESS

Туре

SQ = Square tube profile RT = Rectangle tube profile CR = Circle tube profile AG = Angle tube profile SM = Sheet Metal

Material Thickness


10ga - 0.1345" 12ga - 0.1035" 14ga - 0.075" 16ga - 0.065"

AWS SYMBOLS

The following are some of the common weld symbols you will encounter when reading our assembly instructions.

| AWS SYMBOL | NAME | DESCRIPTION |
|------------|--|---|
| | FILLET WELD | Triangular weld joining two surfaces at right angles; common in T-joints and lap joints. |
| \oplus | SEAM WELD Joins metal using a hole in the top piece, fusing w the bottom piece. | |
| 0 | SPOT WELD Used for fusing overlapping metals at discrete poin often used in sheet metal fabrication. | |
| | PLUG WELD | Process creating a consistent weld along overlapping materials; suitable for containers and cylindrical assemblies. |


| WELD INDICATION | DESCRIPTION | | |
|-----------------|--|--|--|
| 1/8 / 1/8 - 6 | TACK WELD (Small and temporary weld that hold parts together ready for final welding.) | | |
| 1/4 1.5 - 6 | FULLY WELD (Last welding operation performed to complete a joint or structure, ensuring its integrity.) | | |

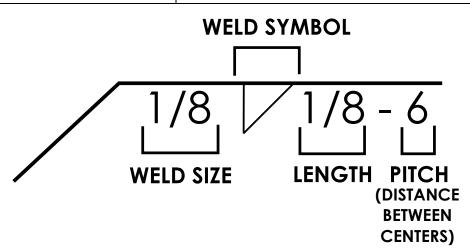


This symbol tells us to make a 1/8" high Fillet Weld, 1/8" long (a "tack"), and to do so along the seam every 6" (the pitch).

PROD REV: A-1 DWG VER: V-1


ASSEMBLY INSTRUCTIONS 1

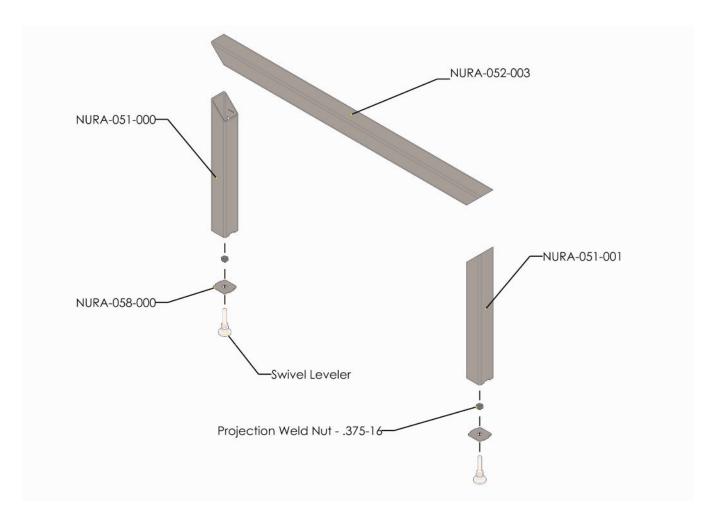



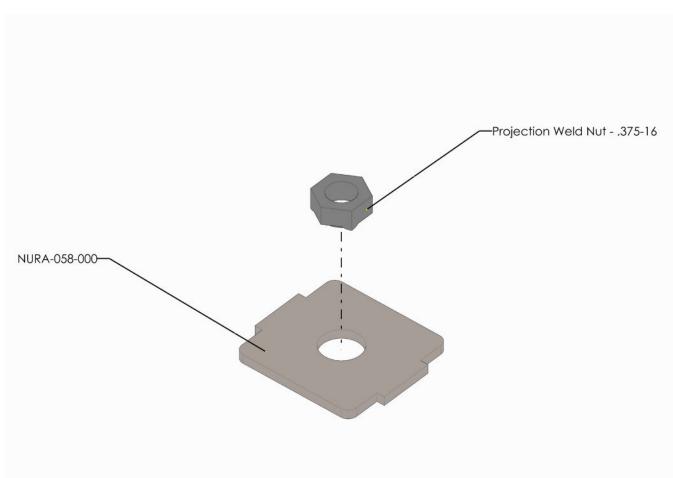




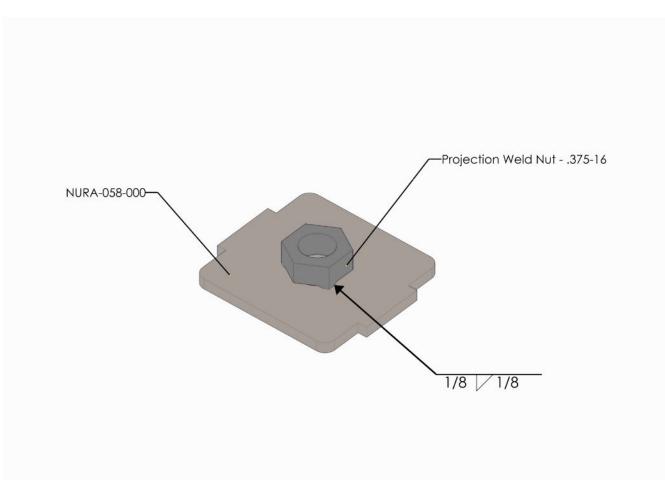



NOTES:


REPEAT STEPS 2 TRHU FOR 4 SETS




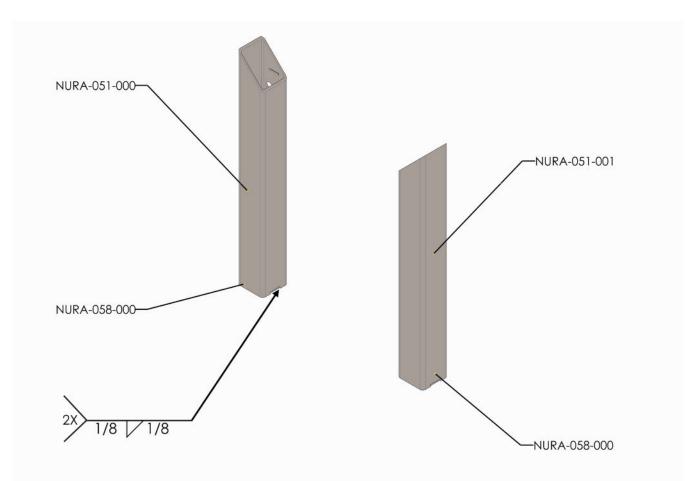

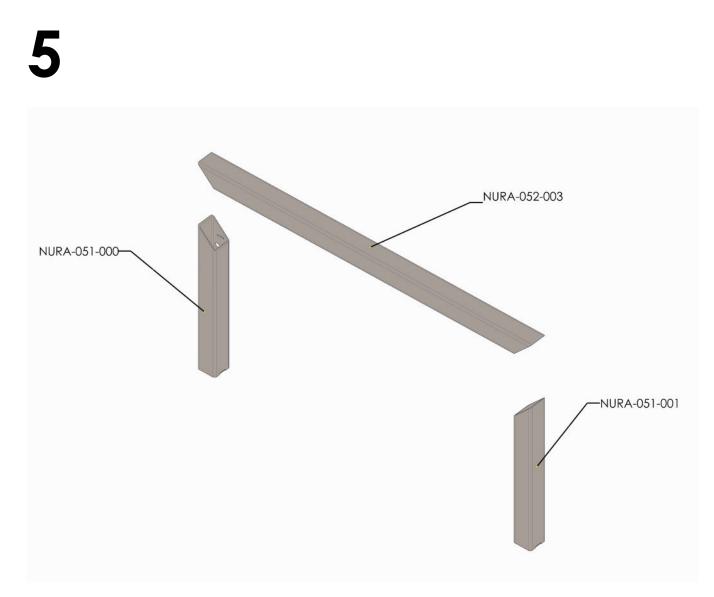

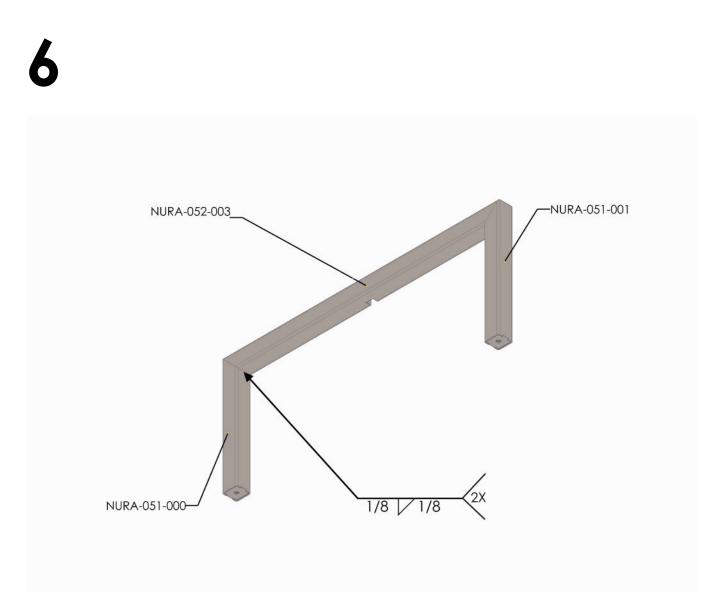

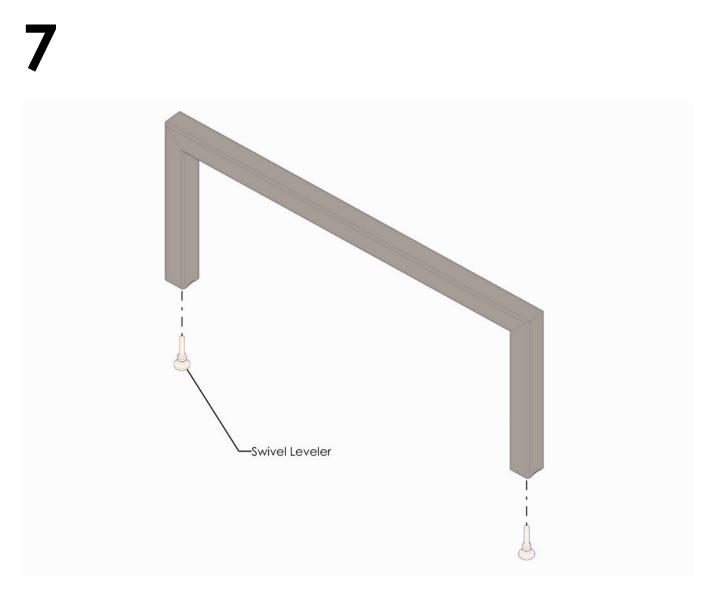


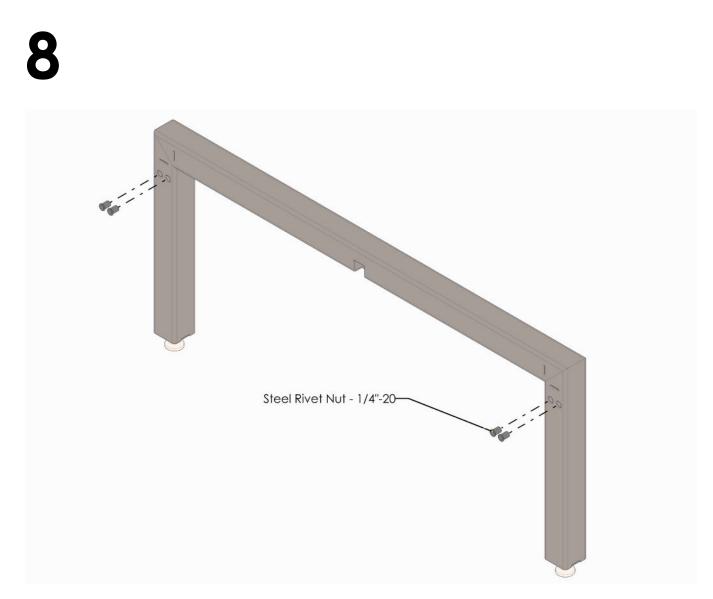


NOTES:

REPEAT STEPS 4 TRHU 8 FOR OTHER PAIR OF LEGS

9

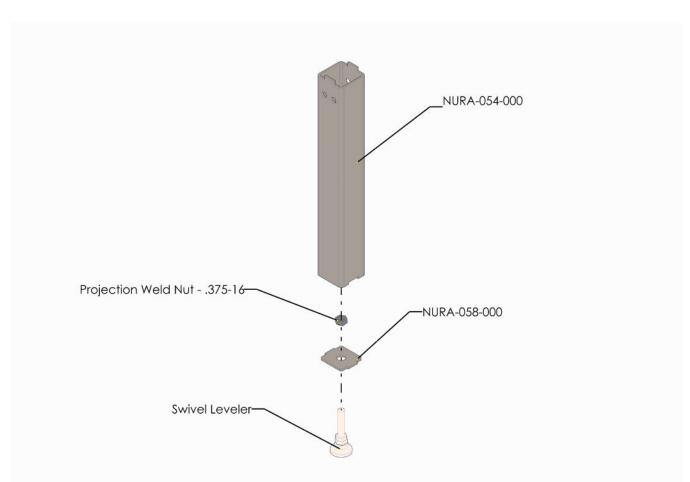



10

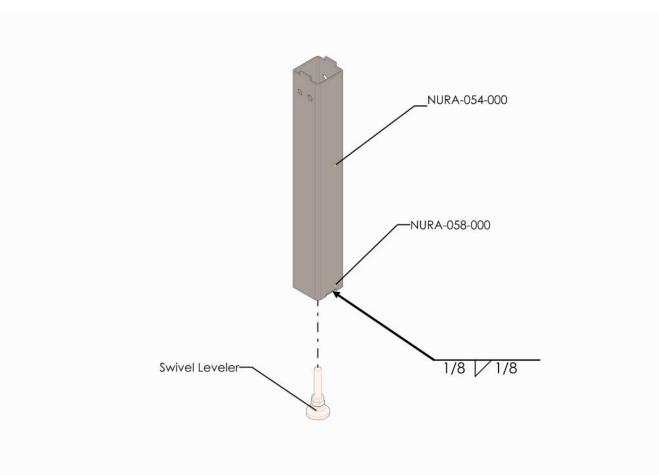


NOTES:

REPEAT STEPS 9 TRHU 10 FOR OTHER PAIR OF LEGS

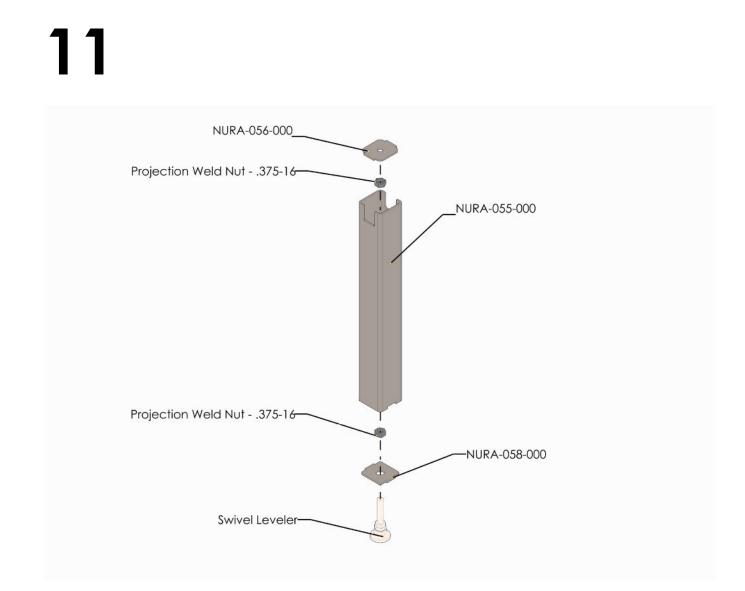

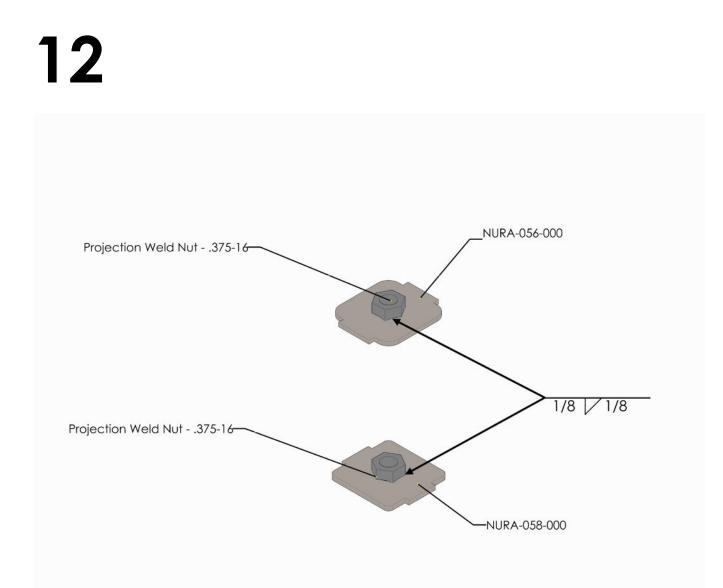

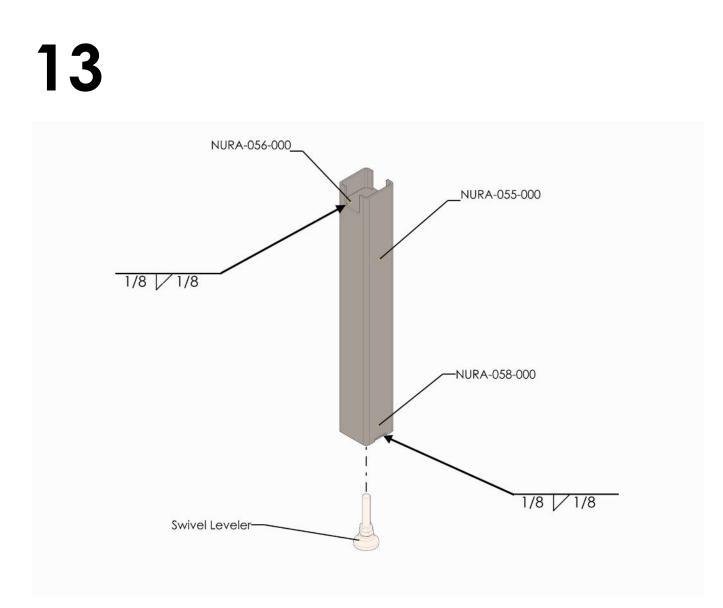

14 NURA-053-003 Steel Rivet Nut - 1/4"-20-

NOTES:


REPEAT STEPS 13 FOR OTHER PAIR OF REACHER

15 NURA-060-003_ NURA-053-003_ NURA-053-003

16 NURA-054-000 NURA-057-000 Steel Hex Head Screw


NOTES:


REPEAT STEPS 16 FOR OTHER PAIR OF REACHER WITH LEG

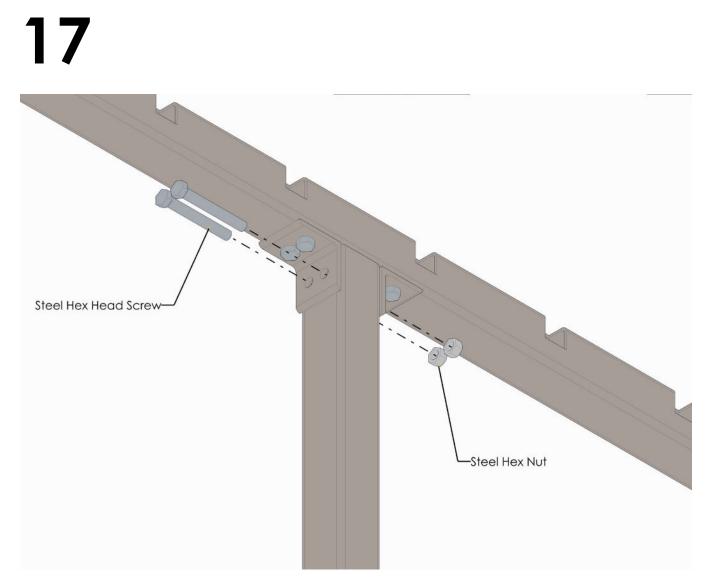


NOTES:

REPEAT STEPS 17 FOR OTHER PAIR OF LEGS

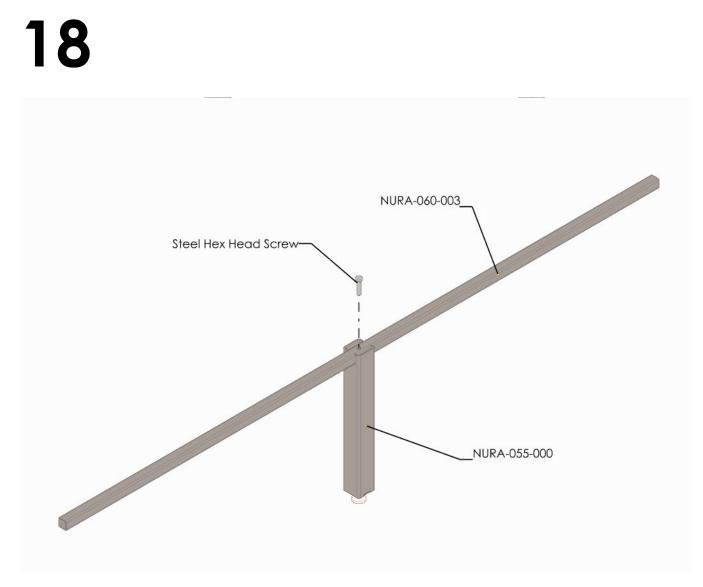

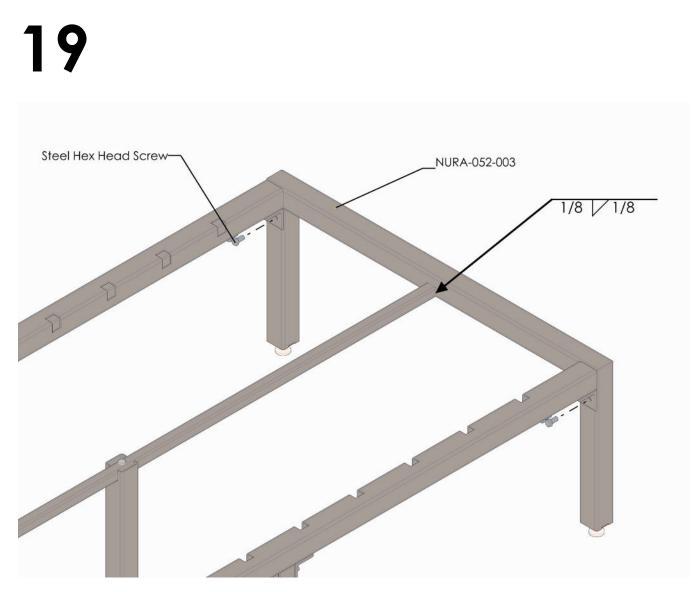

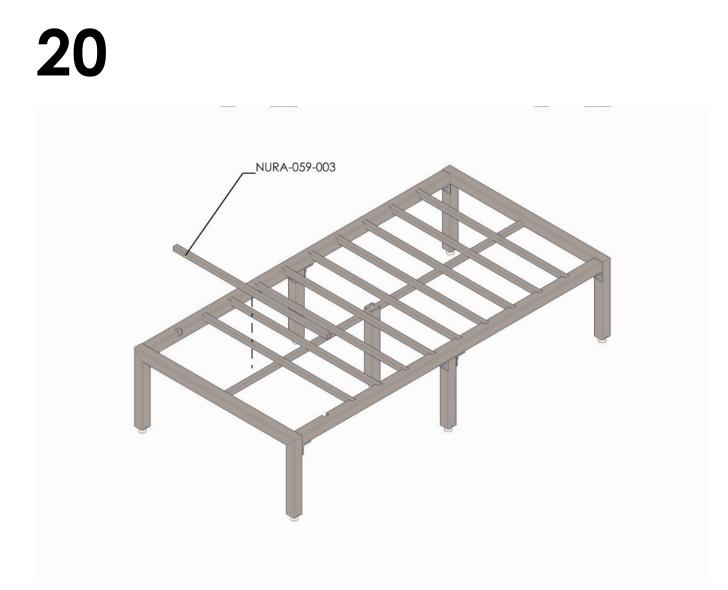

NOTES:


NOW IS THE PERFECT TIME TO GO BACK AND FINISH WELDING ALL THE PREVIOUS TACK WELDS


WE RECOMMEND A 0.25" HIGH FILLET WELD, 1.5" LONG





PROD REV: A-1 DWG VER: V-1


PART DRAWINGS

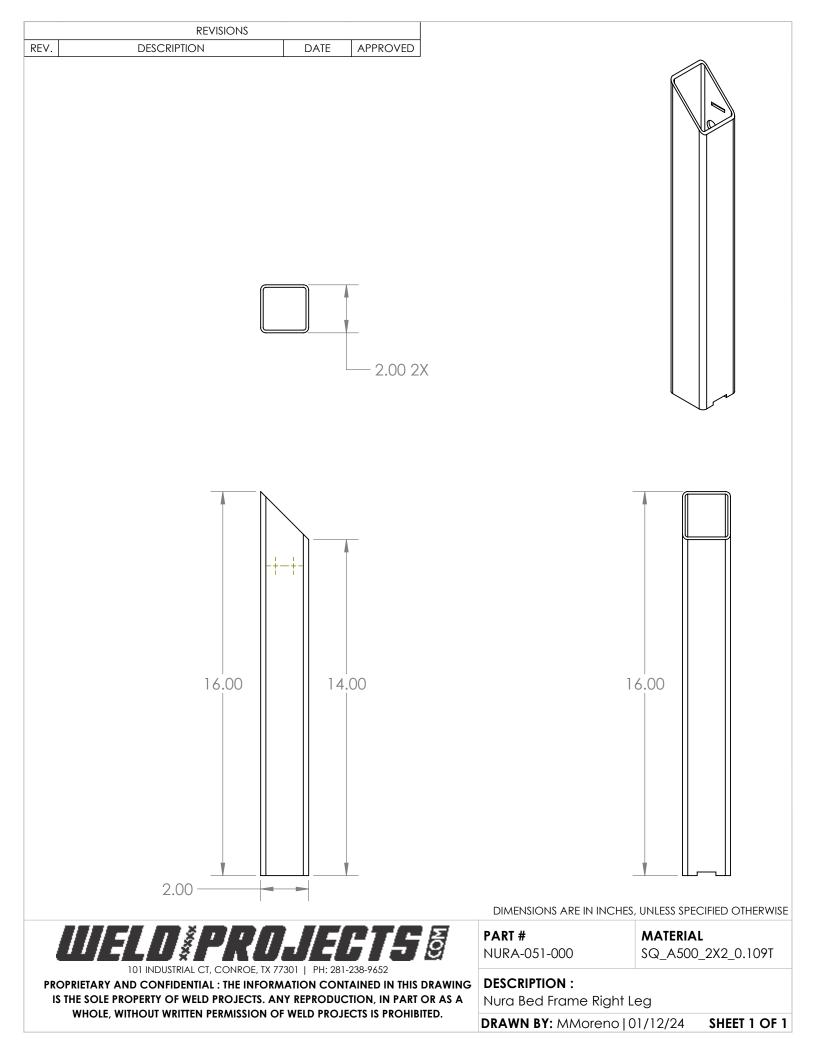


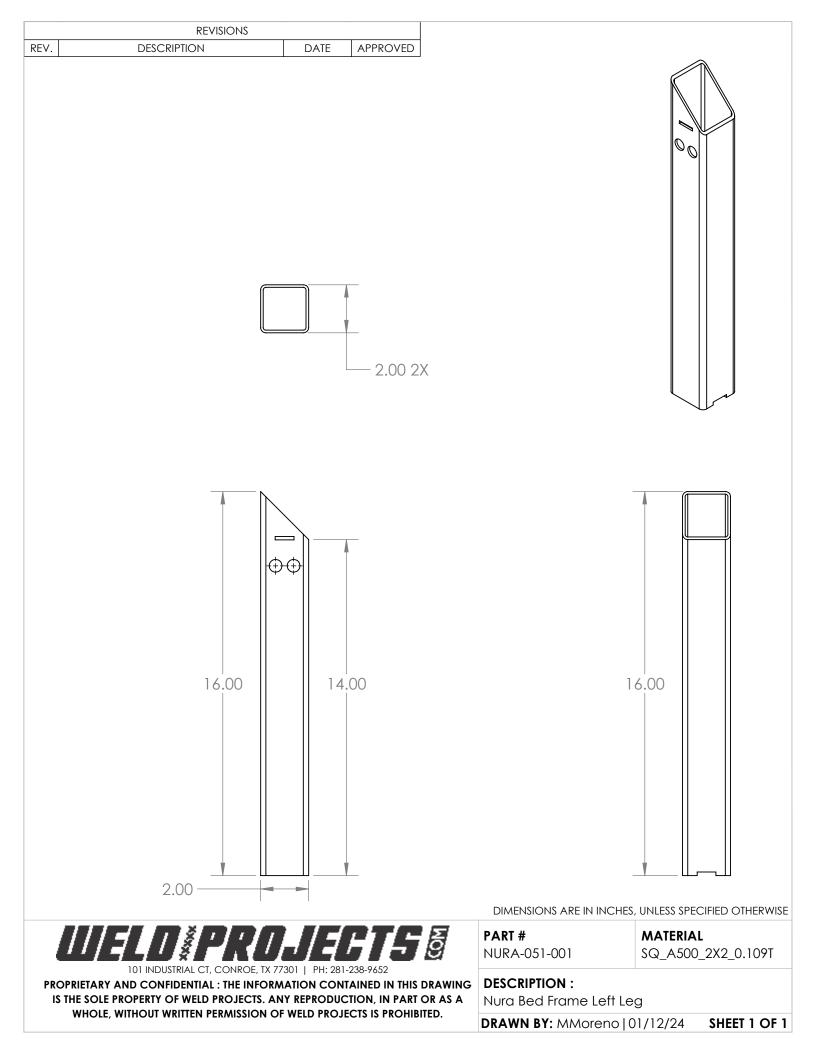

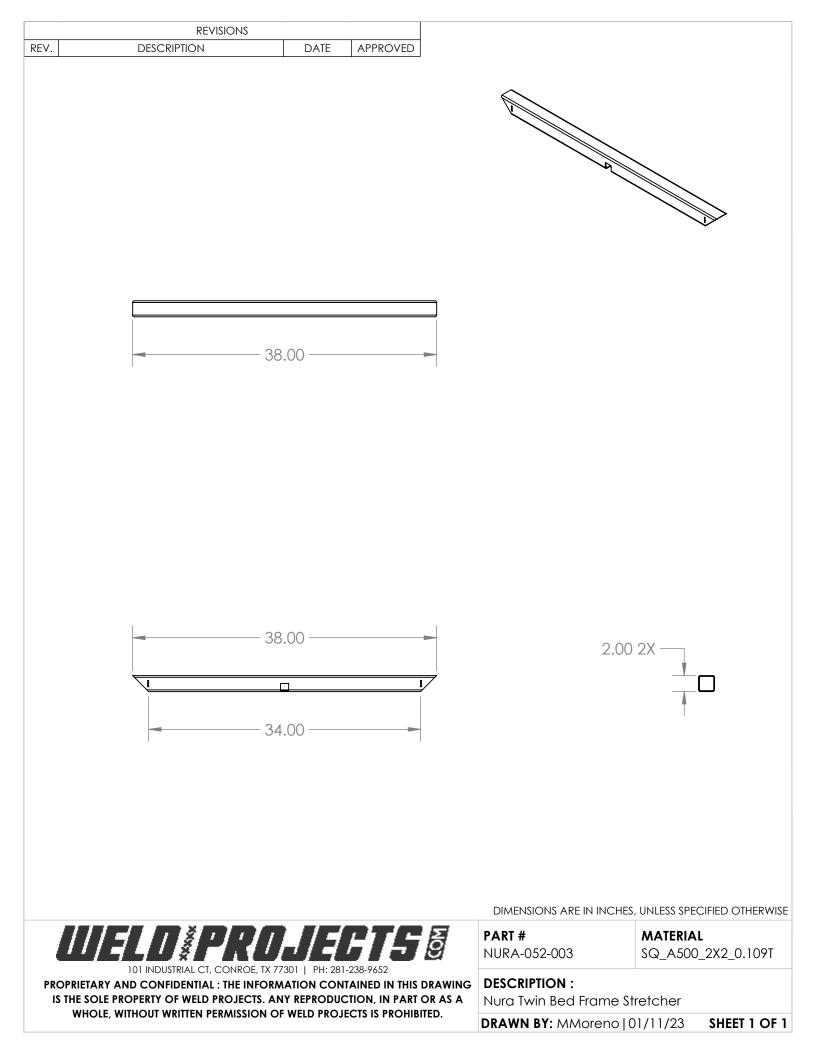

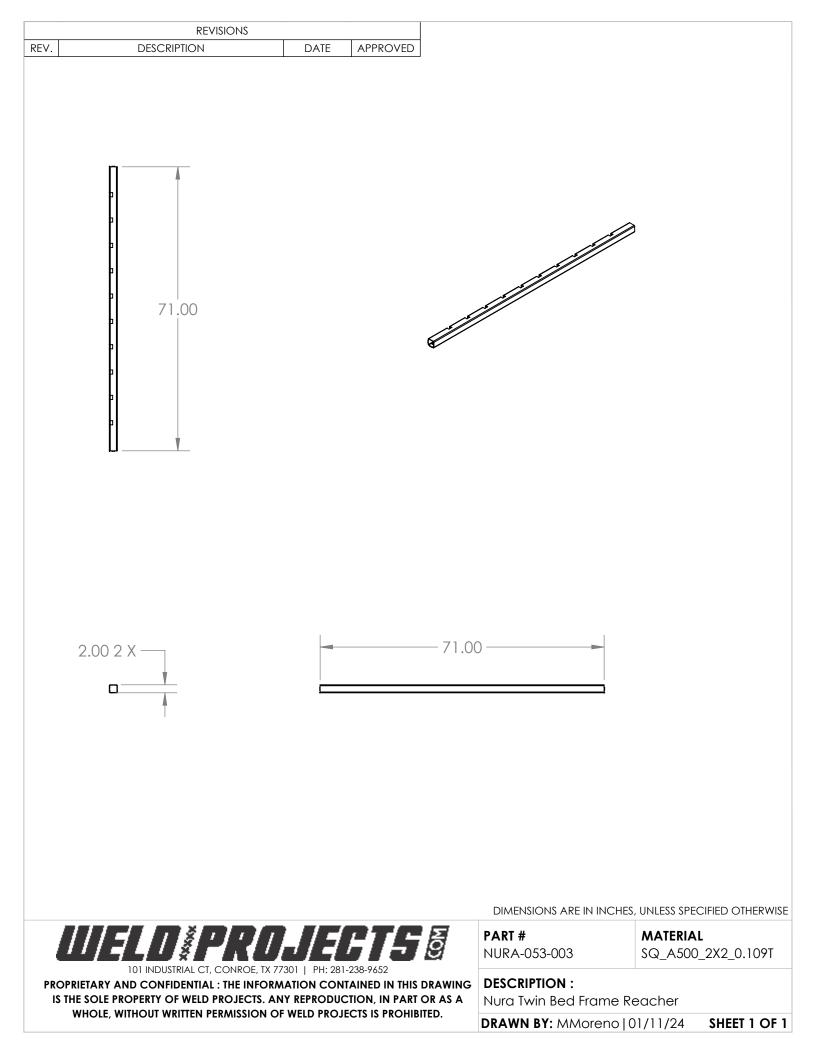

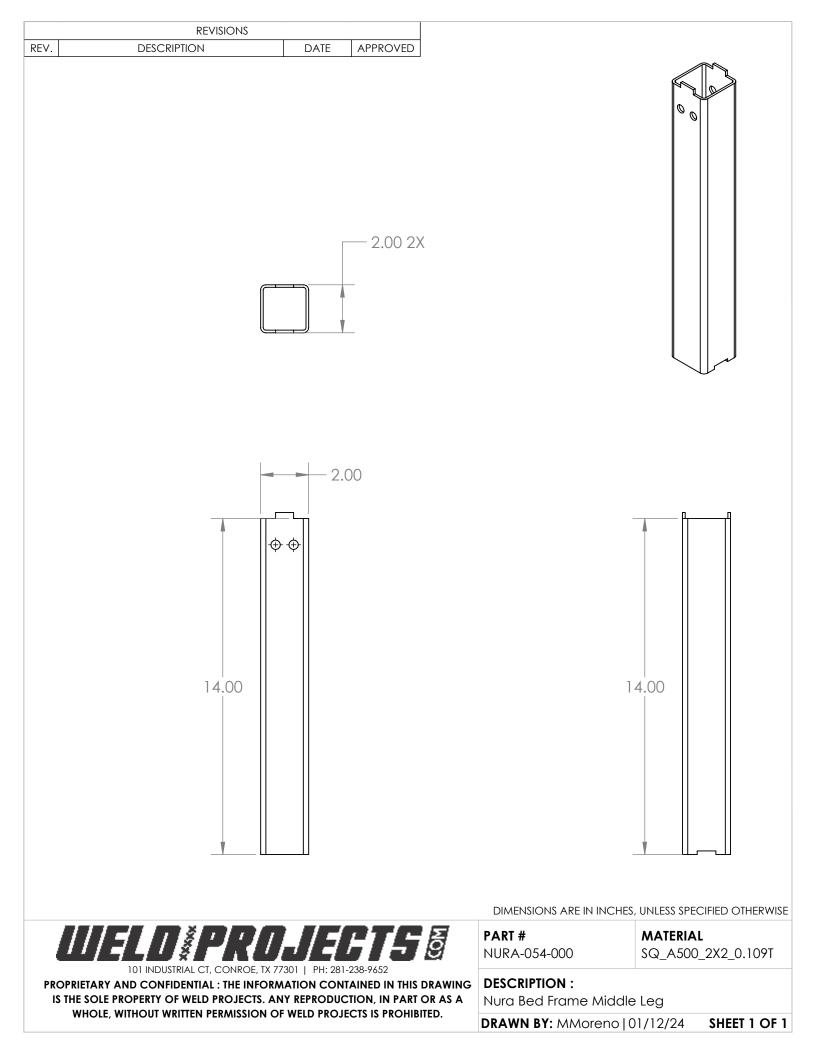

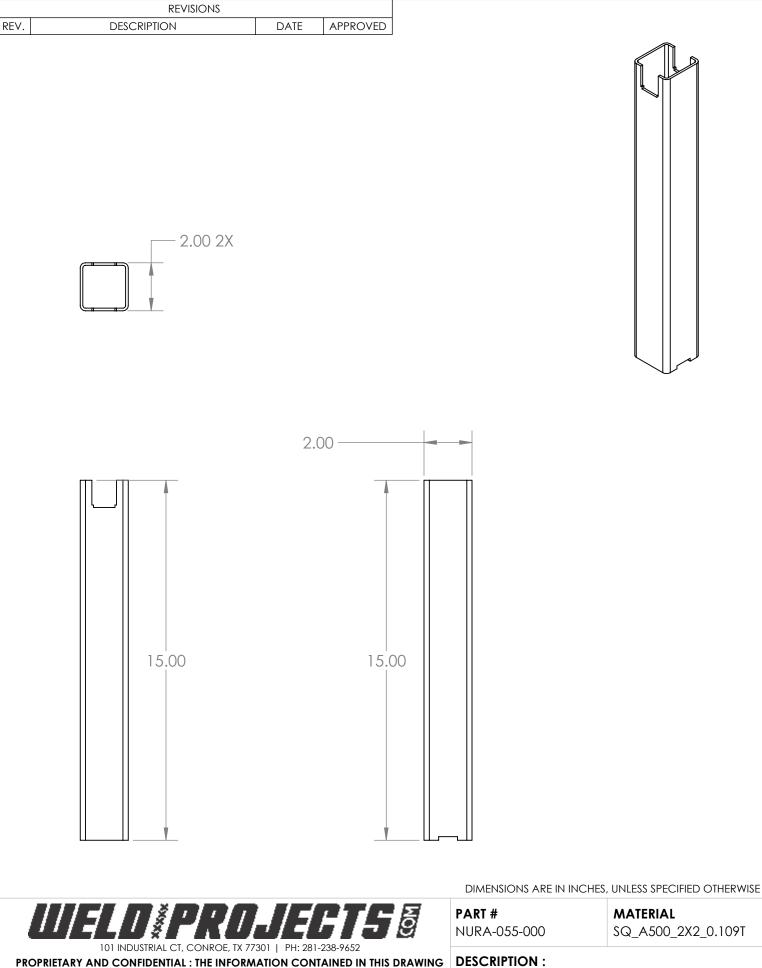


IS THE SOLE PROPERTY OF WELD PROJECTS. ANY REPRODUCTION, IN PART OR AS A WHOLE, WITHOUT WRITTEN PERMISSION OF WELD PROJECTS IS PROHIBITED.

Nura Bed Frame Center Leg **DRAWN BY:** MMoreno | 01/11/24

SHEET 1 OF 1

| REVISIONS | | | |
|-----------|-------------|------|----------|
| REV. | DESCRIPTION | DATE | APPROVED |
| | | | |



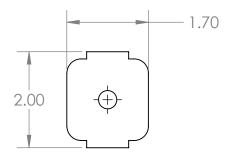

DIMENSIONS ARE IN INCHES, UNLESS SPECIFIED OTHERWISE



PROPRIETARY AND CONFIDENTIAL : THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF WELD PROJECTS. ANY REPRODUCTION, IN PART OR AS A WHOLE, WITHOUT WRITTEN PERMISSION OF WELD PROJECTS IS PROHIBITED. **MATERIAL** SM_A36_0.1045T

DESCRIPTION :

PART #

NURA-056-000


Nura Bed Frame Center Leg Plate


DRAWN BY: MMoreno | 01/12/24

SHEET 1 OF 1

| | REVISIONS | | | |
|-----|--|-------------------------------|-------|---|
| EV. | DESCRIPTION | DATE APPROVED | | |
| | 2.00 | 2.00 | | |
| | 2.00 | 2.00 | 2.00- | 2.00 |
| | ELOŽPRO 101 INDUSTRIAL CT, CONROE, TX | | | CHES, UNLESS SPECIFIED OTHERWIS MATERIAL AG_A500_2X2_0.1875 |
| | Y AND CONFIDENTIAL : THE INFOR E PROPERTY OF WELD PROJECTS. A | MATION CONTAINED IN THIS DRAY | | e |
| | E, WITHOUT WRITTEN PERMISSION C | | | ~ |

| REVISIONS | | | |
|-----------|-------------|------|----------|
| REV. | DESCRIPTION | DATE | APPROVED |

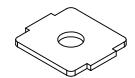

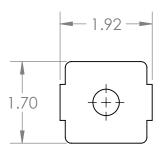

DIMENSIONS ARE IN INCHES, UNLESS SPECIFIED OTHERWISE



PROPRIETARY AND CONFIDENTIAL : THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF WELD PROJECTS. ANY REPRODUCTION, IN PART OR AS A WHOLE, WITHOUT WRITTEN PERMISSION OF WELD PROJECTS IS PROHIBITED.

MATERIAL NURA-058-000 SM_A36_0.125T

DESCRIPTION: Nura Leg Bottom Plate

PART #

DRAWN BY: MMoreno | 01/12/24

SHEET 1 OF 1

